

## YAMAHA MX49



????????? YAMAHA MX49 ?????? ?????????? ?????????? ?? Yamaha MOTIF XS ?????? ?????????????????? ??????????????

?????????: ??? ??????????

?????:

????????????? ?????:

????????? ????? ? ???:

???? ?? ??????????: 23876 ???.

???? ?? ??????????:

23876 ???.

????????:

????? ???????:

[????????? ?????? ?? ?????? ??????](#)

?????????????????: [Yamaha](#)

?????????

## ????????????? YAMAHA MX49

?????MX-???YamahaMOTIFXS?????????????????????????????????????

?????????????. ??? ?????? ????????? ????????? ?????????? ?????????? ?????????? ?????????? 49???61 ????????,  
????????? ?????????? ?????????????? ?????? ?????? "on-the-go". ?? MX ?????? ??? ???? ?????? ?????????????; ???  
????????? ??? ?????, ????? ?????????? ?????? ?????? "????????" ? "????????". ??????? ?????????? ????????? MIDI USB  
?????????????, ?????????? ????????????????????? DAW?VST??????????, ?????????????????????????????????????  
????????, MX???????????????????????????????????? "????????" "?????????" "?????????" "????????????", ?????????????????????  
?? ????? ?????? ?? ?????????????????? ?????????? ?????.

**????????????? ??????????????????:**

- 49 ?????????????? ???????
- AWM2 ???-??????????
- ?????????? 128 ???
- ?????????????????????? 16 ???????
- WaveROM 166 ??
- ??????: Preset: 1,106 Normal Voices + 61 Drum Kits, GM: 128 Normal Voices + 1 Drum Kit, User: 128 Normal Voices + 8 Drum Kits
- 128 ??????????????
- ??????: Reverb x 9 types (42 presets), Chorus x 17 types (88 presets), Insertion Effect x 48types (267 presets) x 4, Master EQ (5 bands)
- 27 ??????????????????
- 208 ????????????
- 999 ??????????????????
- Remote Control - Windows®: Cubase 6 ??????, SONAR X1 Producer - Mac®: Cubase 6 ??????, Logic Pro 9, Digital Performer 7
- ??????????????: Pitch Bend Wheel x 1, Modulation Wheel x 1, Assignable Knob x 4, [DATA] dial x 1
- ??????????: 3 digit LED + 20 x 2 line character LCD (backlit)
- ??????????????: OUTPUT [L / MONO] / [R] (standard phone jack), [PHONE] (standard stereo phone jack), [FOOT CONTROLLER], [SUSTAIN], MIDI [IN] / [OUT], USB [TO HOST] / [TO DEVICE], [AUX IN], DC IN
- ?????????: 830 ? 91 ? 298 ??
- ????: 3.8??

??????

?? ????????? ?? ????? ???????.